
INSTALLATION MANUAL

38012A

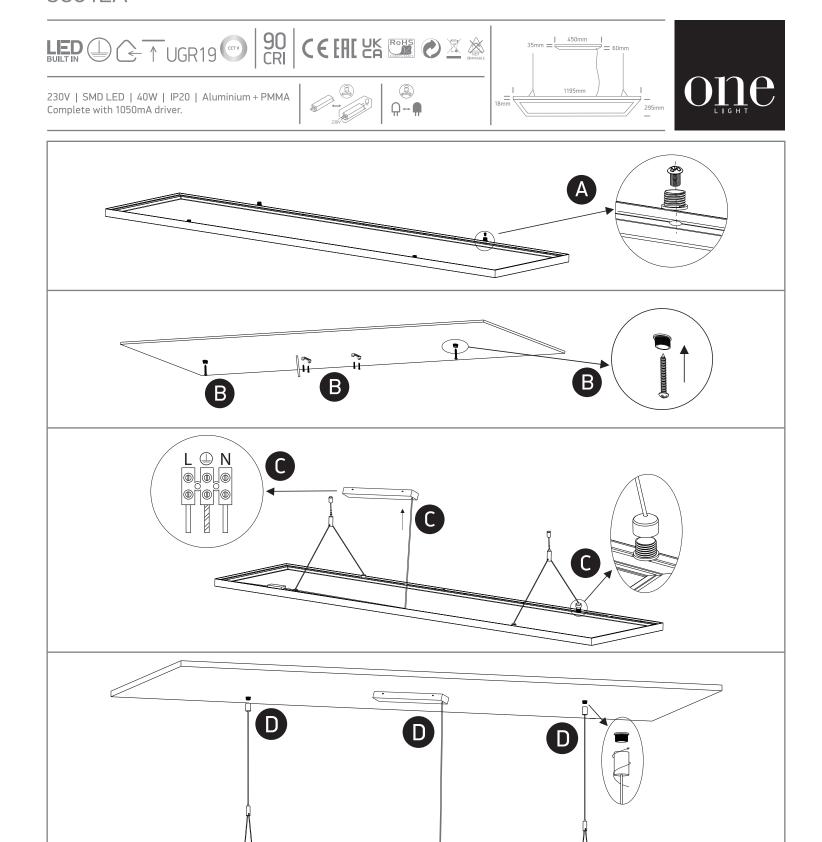

Warnings:

- 1. Make sure that the product is installed properly before connecting to electricity.
- 2. Do not cover the fitting.
- 3. Maintenance and installation should only be carried out by a professional electrician.
- 4. Operating temperature: -20°C to +45°C.