


INSTALLATION MANUAL

65624T

ecotrackspot



Ra>80
ADJUSTABLE

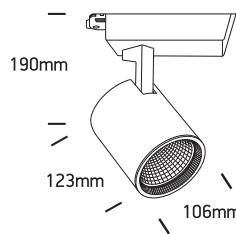

35W | 230V | 50/60Hz | IP20 | Die cast | Adjustable

Complete with driver.

<p>1</p> <p>To mount the track adaptor into the track system, first check that the selector knob A is at 0 position and the adaptor lock B is disengaged.</p>	<p>2</p> <p>When installing the adaptor into the track, ensure that it is orientated correctly.</p>	<p>3</p> <p>Rotate adaptor lock B clockwise 90° to lock the adaptor into the track system.</p>
<p>4</p> <p>Rotate selector knob A to the desired position circuit.</p>	<p>4a</p> <p>Circuit 1: To connect on circuit 1, from 0 position, rotate the knob A fully clockwise to position 1.</p>	<p>4b</p> <p>Circuit 2: To connect on circuit 2, from 0 position, rotate the knob A fully anti-clockwise to position 2.</p>
<p>4c</p> <p>Circuit 3: To connect on circuit 3, from 0 position, rotate the knob A to position 3.</p>	<p>5</p> <p>350° 90°</p>	

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.